

Black Jack III [®]

Nitrogen Blow-Off Gun System for use in demanding Environments when particulate contamination is critical

Features

- Membrane filter cartridge.
- Absolute retention of particles > 0.05µm.
- Cartridges are pre-flushed with 0.2µm filtered Freon-TF in a Class100 environment.
- Trigger mechanism guaranteed.


Benefits

- Provides blow-off gas virtually free of particulate contamination.
- Can provide same flow with tighter filtration as available from a 25mm, 0.45µm disc.
- No loss of costly cryogenic nitrogen.
- Facilitates the removal of particulates found on non-conducting surfaces.
- For use in critical environments.
- Class 100 compatible

Product Codes

Black Jack Gun - FO 0010

Filter (pack of 8) - FO 0210

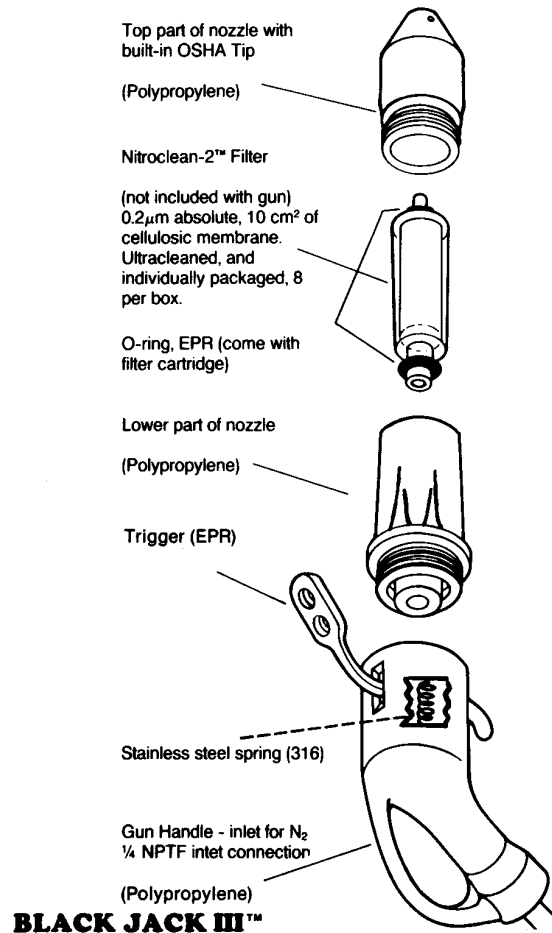

BLACK JACK [®] III		
Materials	Standard	Acid Resistant
Handle	Polypro	Polypro
Barrel	Polypro	PVDF
Trigger	Ethylene-Propylene	Ethylene-Propylene
Max. inlet pressure	100psig	100psig
Connections	¼" NPTF	¼" NPTF
Weight	125g	125g